



LASER MACHINE MANUFACTURER
MICROSTEP DISTRIBUTOR

Replacing Your Filters

To replace the filters themselves you need to:

1. Turn the machine off.
2. Open the front left door at the bottom of your laser machine (there are two black twist toggles which need to be rotated 90degrees to allow the door to open).
3. There are labels in your unit showing how the filters can be removed. Each filter has a handle on the front of it to allow it to be pulled out of the machine. Please observe all weight warnings as indicated on each filter (especially the gas filter).
4. The bottom filter is the gas filter and the handle typically needs to be lifted slightly as you pull it forwards as the filter is sitting on a tray mounted on castors and there is a slight lip at the front to prevent the filters from moving during normal operation.
5. Once the filters have been replaced, you can close the door, turn the black toggles to lock the door.
6. You can now resume using your machine. Please be aware that you may need to follow the steps to re-set the filter, if the unit does not automatically detect that a new filter has been installed.

CTR Future Ltd.
Unit 5-6 Sterling Business Park, Salthouse Road,
Brackmills Industrial Estate, Northampton, NN4 7EX

Tel UK: 0844 800 4727
Tel EU: +44 (0)1604 675 417

Email: info@ctrfuture.co.uk
Web: www.ctrasers.co.uk

Company Reg. No. 5158353
Registered Office: 47 Park Road, Hartwell
Northamptonshire, NN7 2HP (UK)
VAT No. 844 6899 68